

HD Digital Recorder

User's Manual

HDR-4100C/HDR-4000C

Notice

Thank you for purchasing a HUMAX product. Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

Copyright (Copyright © 2016 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Meaning of Symbols

	To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.
	This symbol indicates dangerous voltage inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

Warning

Indicates a hazardous situation which could result in serious injury

Caution

Indicates a situation which could damage the equipment or other apparatus

Note

Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

'WEEE' Instructions

This product should not be disposed with other household waste at the end of its working life. Please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

Domestic users:

Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users:

Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

Trademarks

- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia interface are trademarks and registered trademarks of HDMI Licensing LLC.



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Notice

EU regulatory conformance

Hereby, HUMAX Co., Ltd, declares that this HDR-4000C/E and HDR-4100C/E are in compliance with the related Directives

The full text of the EU declaration of conformity is available at the following internet address:

Germany : <http://www.humax-digital.de/gm/ec.php>

For Your Safety

Safety Instructions

1. POWER SUPPLY

- Operate this product only from the type of power supply shown on the marking label. If you do not know the type of power supplied to your home, contact your local power company.
- Disconnect the power supply before you start any maintenance or installation procedures.

2. OVERLOADING

- Make sure that the wall outlet, extension cord and adapter have a sufficient power rating for the appliance. If not, this can cause an electric fire shock.

3. LIQUID

- Do not expose this product to liquids. Do not put objects filled with liquid on the product.

4. CLEANING

- Disconnect the product from the wall outlet before you clean it.
- Use a moist cloth to clean the product. Do not use solvents. Wipe the surface gently with a soft cloth as it may get scratched.

5. VENTILATION

- Make sure that the slots on top of the product are not blocked. It is necessary to have a sufficient airflow into the unit.
- Do not put electronic equipment on the product.
- Do not put objects on the product. This will block the ventilation or cause damage to the surface.

6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

7. LIGHTNING, STORM OR NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

8. EXTRANEIOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

9. REPLACEMENT OF PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitution may result in additional damage to the unit.

10. CONNECTION TO THE CABLE TV SIGNAL

- Disconnect the power supply before you connect or disconnect the cable from the cable TV signal. If not, this can cause damage to the cable TV line.

11. CONNECTION TO THE TV

- Disconnect the power supply before you connect or disconnect the cable from the TV. If not, this can cause damage to the TV.

12. LOCATION

- Place the product indoors to avoid exposure to lightning, rain or sun. Do not place it near a radiator or heat register.
- Keep at least 10 cm clearance from any other appliances susceptible to electromagnetic influences such as a TV or a VCR.
- If you place the product on a rack or a bookcase, make sure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable surface where it can fall. A falling product can cause serious injury to a personnel and serious damage to the appliance.

13. Environment

- Attention should be drawn to the environmental aspects of battery disposal.
- Care is required for the use of this apparatus in tropical and/or moderate climates.

Cautions and Warnings

1. To avoid damage of the power cord or plug

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord while you hold the plug.
- Keep heating appliances as far as possible from the power cord to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.
- All-pole main switch shall remain readily operable. (For products with power switch)

2. To avoid electrical shock

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.
- Unplug the power cable before you install the antenna cable.

3. To avoid damage of product

- Do not use the product when it is out of order. If you continue to use the product when defective, this may cause serious damage. Make sure to contact the customer service centre if the product is out of order.
- Do not insert metal or alien substance into the slots for the modules or Smartcards. It may cause damage to the product and reduce its life span.
- Do not overly pile objects on the product. It may cause cracks, deformation and discoloration.

Contents

Notice	2	Recording	16
For Your Safety	4	Recording	
Contents & Accessories	5	Vodafone Select & Search	18
Contents		Vodafone Select	
Accessories		Search	
Getting Started	6	Settings	19
Front & Rear		Settings	
Connections		Appendix	30
Remote Control		Specification	
Wizard		Service and Support	
Watching TV	11	Trouble Shooting	
Home		Setting Universal Remote Control	
TV Program		Open Source Software Notice	
Pausing and Rewinding Live TV			

Accessories



Remote Control
/ Batteries



Quick Start Guide



HDMI Cable




Antenna Cable



LAN Cable

Note: Accessories may vary according to area.

Front & Rear

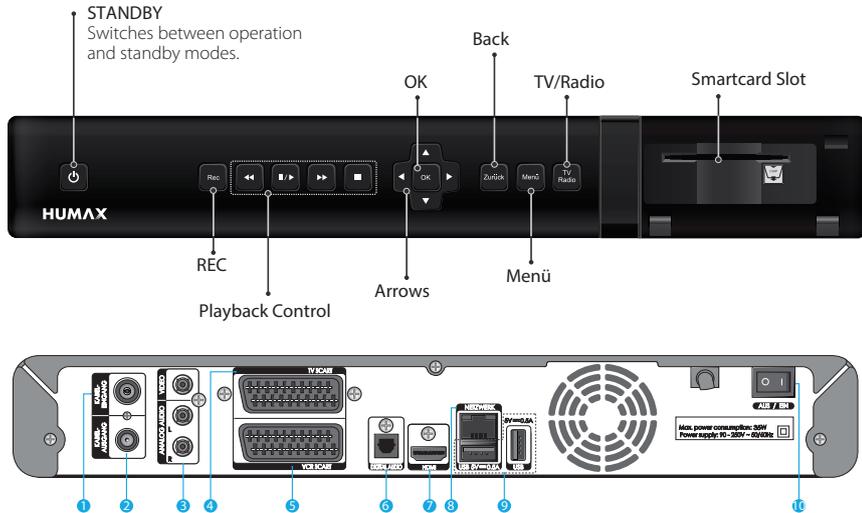


- 1 KABEL-EINGANG: Connect an antenna cable to the cable network.
- 2 KABEL-AUSGANG: Connect to the TV or VCR using an antenna cable.
- 3 VIDEO/AUDIO: Use an RCA cable to connect to the TV.
- 4 TV SCART: Connect to the TV using a SCART cable.
- 5 VCR SCART: Connect to the VCR or DVD using a SCART cable.
- 6 DIGITAL AUDIO: Connect to the audio system using an S/PDIF cable.
- 7 HDMI: Connect to the TV using an HDMI cable.
- 8 NETZWERK: Connect a LAN cable.
- 9 USB: Connect a Wi-Fi Stick.
- 10 SWITCH: Power on/off.

Note: The image may differ from the actual product.

Inserting the Smartcard


1. Open the right-hand flap on the front panel to expose the card slot.
2. Hold smartcard horizontally with the electronic chip facing downwards.
3. Insert the smartcard into the slot.

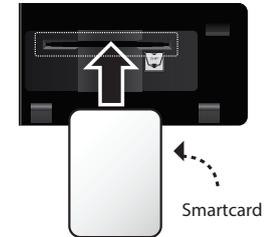

Connections

This section describes how to connect your product to match your particular devices and to gain optimum signal quality.

Warning: Connect all devices before you plug any power cords into the wall outlet. Always turn off the product, TV and other devices before you connect or disconnect any cables.

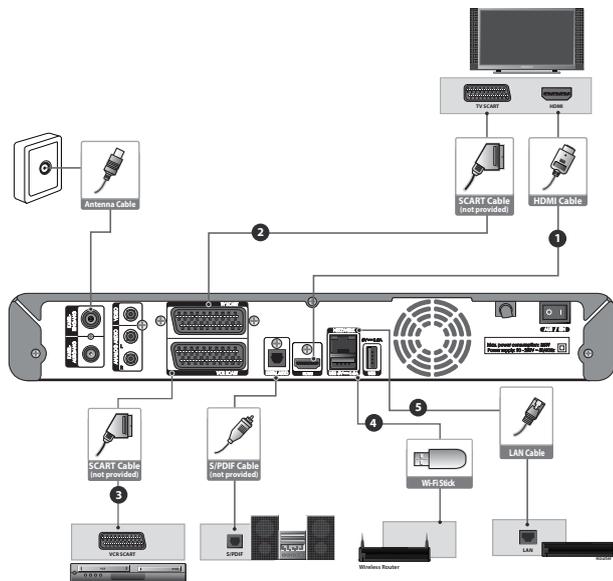

Note:

- If you encounter any problems setting up your product, please contact your local retailer or HUMAX Customer Service.
- Connecting your TV directly to the audio/video output of the product will assure a more vivid picture and enhance your viewing enjoyment.

Connecting the Cable TV Line

Connect an antenna cable from your cable TV network to **KABEL-EINGANG** connector.

Connecting the TV

1 TV with the HDMI connector

For the best picture quality, connect the product and TV using an HDMI cable.

2 TV with the SCART connector

For good picture quality, connect the product and TV using a SCART cable.

3 VCR with the SCART connector

To record an event with your VCR, connect the product and VCR using a SCART cable.

Note:

- When using the digital audio system, connect the product and the digital audio system using an S/PDIF cable for audio.
- Programs restricted by DRM (Digital Rights Management) may not be viewed via the HDMI cable. Connect using a SCART or composite cable.

Connecting the Network

4 Connecting to the Wi-Fi (Wireless LAN)

You can connect the network via the Wi-Fi access point.

1. Connect the Vodafone Kabel Deutschland Wi-Fi Stick to the USB port.
2. To configure the wireless network, go to the **Menü > Settings > Internet setup**.

Note: Make sure the distance between the Wi-Fi access point and the product is not too great. This may lower the quality of service.

5 Connecting to the LAN

Connect one end of the LAN cable to the product and the other end to the LAN router.


Remote Control



	STANDBY	Switches between operation and standby modes.
	TV	Controls TV.
	Exit	Exits all On-Screen Display (OSD) screens.
	TV/Radio	Switches between TV and radio modes.
	Menü	Displays the main menu.
	Programm	Displays the program guide.
	Aufnahmen	Displays the recording list.
	Select Video	Enters VOD service.
	Suche	Finds programs by genre or keyword.
	+/-	Adjusts the audio volume.
	ARROW	Moves the cursor up, down, left or right.
	OK	Selects a menu or confirms a selection.
	P +/-	Changes the channel or page.
	MUTE	Mutes audio.
	Zurück	Returns to the previous channel. Goes back to the previous screen.
	Playback Control	 Rewind,  Pause/ Play,  Fast Forward,  Record,  Stop
		Colour keys for interactive applications.
	Opt	Displays the Audio/ Subtitle Language and Video Subchannel.
	NUMERIC	0-9
	Teletext	Enters the digital text service.

Inserting Batteries

Insert the batteries matching the plus(+) and minus(-) at each end.

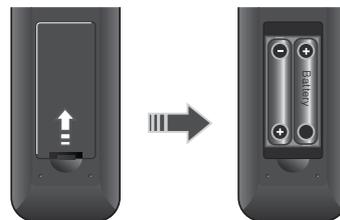

Wizard

The installation wizard operates automatically when you power on the product for the first time or do a factory reset in the menu.

Note: If you exit the installation wizard without fully completing the channel searching procedure, you may not have all of the channels available.

1. Language selection

Select a language.

2. Channel scan



The HD-Video-Recorder automatically searches for TV and radio channels and stores them in places 101 to 999. After the completion of the channel search, the total number of TV and radio channels is displayed in the installation screen.

3. Internet connection

If you are connected to the Internet you can use Vodafone Kabel Deutschland's online video store "Vodafone Select". This service is not yet available everywhere in Germany. To connect the receiver to the internet, follow the instructions on the TV screen.

- **LAN:** Internet connection is automatically set up if your HD-Video-Recorder is connected via LAN cable.
- **Wi-Fi Connection:** If a Wi-Fi stick is detected a wireless connection will be set up automatically after the user has entered the according Wi-Fi security key.

Note: When both a Wi-Fi stick and a LAN cable are connected, the Internet connection is set up via LAN.

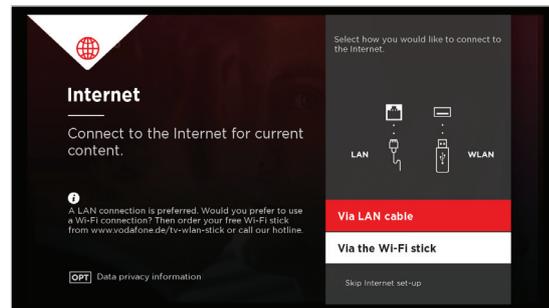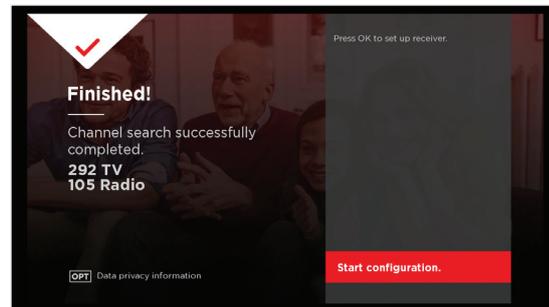

4. Energy mode

You can decide whether

- Your receiver consumes less energy overall, but starts slowly, or
- Your receiver starts rapidly but has a higher overall energy consumption.
- **Standard:** The default mode is called 'Standard' and has the lowest energy consumption but the longest start-up phase.
- **Active (scheduled):** You can select the times at which the device remains in Active mode and when it falls into the Standard mode.
- **Active:** The Active mode has the highest power consumption and keeps the HD-Video-Recorder ready at any time.

5. Change PIN




To protect your child from adult content you can change the parental PIN at any time. You can find the FSK 16 PIN in the letter your Smartcard came with.

6. Summary

At the end of the installation process you receive a summary of the changes you have conducted.

Subsequently you will be asked to give your consent to start with the Menu instead of Live TV and receiving messages provided by Vodafone Kabel Deutschland.

Afterwards a tutorial is started that describes the basic alterations that came with the Software Update.

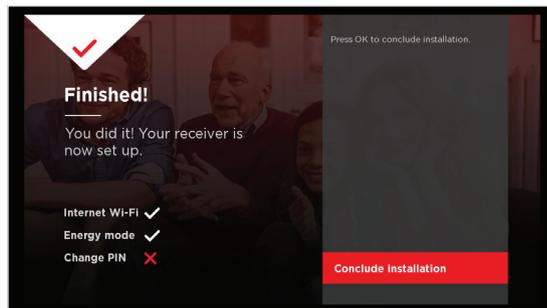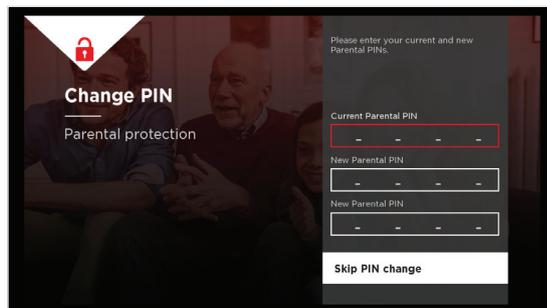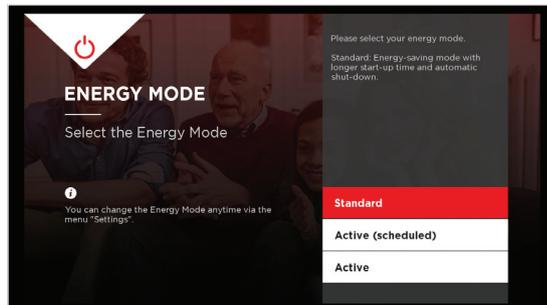

Home

You can go to the home menu by pressing the **Menü** button from wherever you are. From the home menu, you can reach Live TV, the Program Guide, Recordings, Vodafone Select (VOD), Search, Settings and the Mailbox.

- Press the **Menü** button to go to Live TV.


Watching Live TV

- Press the **P+/P-** button in order to change channels.
- You can also enter the channel number directly.
- Select a channel by pressing the **Programm** button and choose a channel from the **Program Guide**.

Setting Options

Press the **Opt** button while watching live TV to change the sound, subtitle language and optional channel.

- **Sound selection:** Change the sound when the program supports multiple audio languages.
- **Subtitles language:** Activate subtitles or change the subtitle language if the program supports multiple subtitle languages.
- **Optional channel:** The available video subchannels will be listed. Select one of the subchannels when watching a channel that provides multiple video feeds.

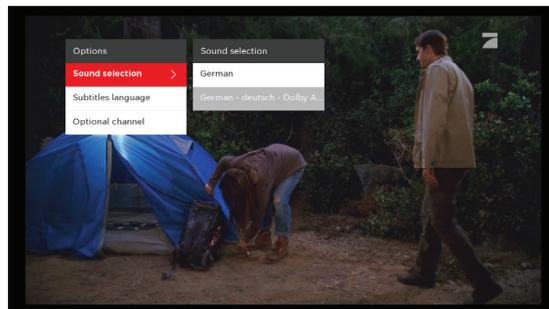


Watching TV

Program Info Bar

You can change channels, see what's on later or set a recording.

- Press the **OK** button while watching live TV to display the program info bar.
- Press the **▲/▼** button to change channels.
- For SD events also available in HD, the **BLUE** button is displayed. Press the **BLUE** button in order to tune directly to the according HD channel.
- Press the **Exit** button to hide the program info bar.

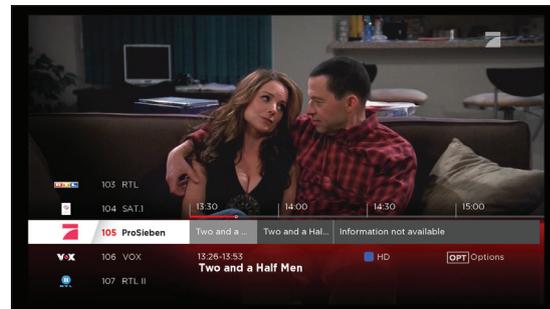

Program Detail

The detailed information about the current program is displayed.

- **Watch:** Watch the current program
- **Watch in HD:** Watch the channel in HD if you have an activation for the selected channel.
- **Record:** Record the current program.
- **Record series:** Record all episodes of the series.
- **Add to favourites:** Add channels to favourites.



TV Program

The TV program is the on-screen version of your classic TV guide. It's where you'll find all the information concerning your favourite TV programs and channels in chronological order.



- In order to access the TV program you can either press the **Programm** button of your Remote or enter the Program section of the Menu.
At first you will be shown an overview of what is airing currently, next and at prime time. To enter the view with detailed starting times, you need to press the **▶▶** button of your remote twice.

Navigation in TV Program

- Use the **▲/▼** button to navigate between channels.
- Use the **◀/▶** button to navigate between programs.
- Use the **◀◀/▶▶** button to view the programs one day earlier or later in the section with detailed starting times.
- Use the **P+/P-** button to change pages.
- By pressing the **YELLOW** button you can sort your channels by different categories like Favourite channels or alphabetically by choosing **'From A-Z'**.

Watching a program

- Select a current program.
- Press the **OK** button to exit the TV Program screen and watch the program.

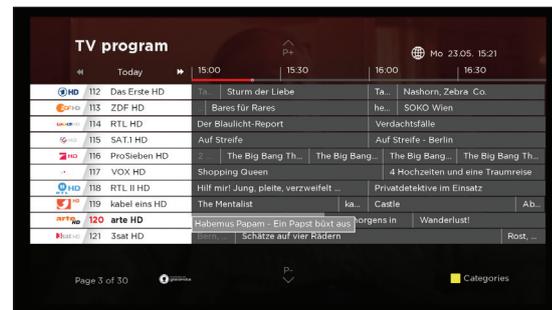
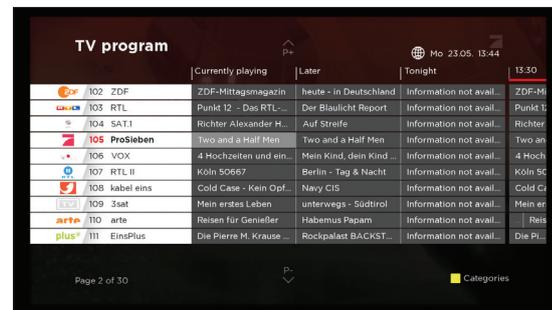


Scheduling a program

1. Select a future program. When pressing the **OK** button on a future event its program information will be displayed.
2. Select **Record** and press the **OK** button.
The scheduled program turns red and will be recorded.
You can also record a program without showing its detailed information by just hitting the **Rec** button when in the TV program.

Note:

- Select **Add to favourites** to add this channel to the favourites.
- If the program information is unavailable, you can schedule a recording for the program manually or by just hitting the **Rec** button when you're in the TV program.
- Refer to **Recording** for recording conflicts on page 16.

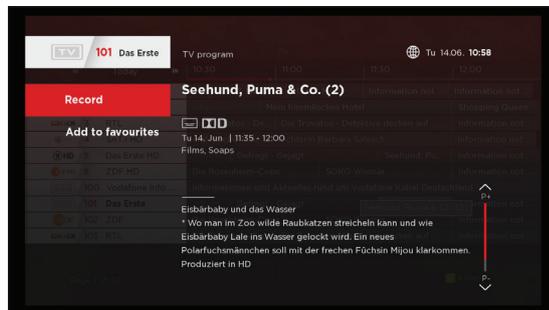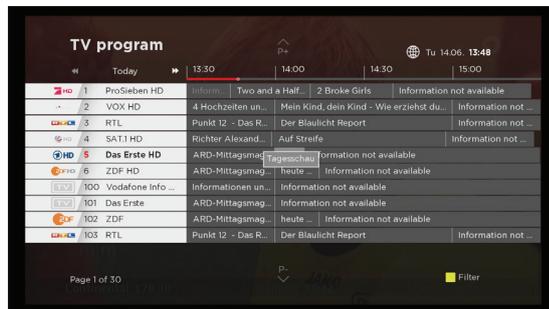

Pausing and Rewinding Live TV

When for some reason you have to interrupt watching, you can pause live TV and continue at the exact same point without missing a bit any time later. Just press pause and the program will be saved on the built-in hard drive for you to watch later.

To pause the program you are watching

1. Press the **II▶** button while watching live TV to pause the program.
2. Press the **II▶** button again to play the program you paused from the point where you paused it. The pause function creates a time offset between the live broadcast and the playback for the user.
3. Press the **■** button to end the time-shifted playback and go back to the live program.


To rewind and watch missed scenes

1. In order to rewind the program you are currently watching press the **◀◀** button.
2. Press the **II▶** button at the point where you want to start watching. You can pause, rewind or fast forward within the program.

You can rewind up to the point when you tuned into the channel you are watching. If you reach this point while you are rewinding, the program is automatically paused.

Note:

- You can fast forward only when there is a time offset between the current watching point and the live broadcasting point caused by pause or fast rewind. You can fast forward up to the current broadcasting point.
- If you switch channel your current rewind opportunity gets lost and the device starts to record the currently watched channel.

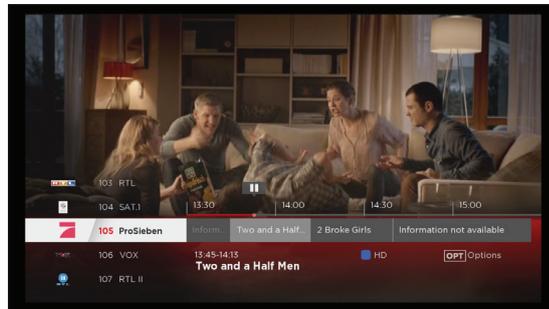

Recording

You can watch a channel while recording other channels. You can record up to four channels at the same time (or three channels, respectively, when simultaneously watching another one).

Instant Recording

You can record the program you are watching instantly by pressing the **Rec** button. The recording will start at the current point of the broadcast. To stop recording press the **Rec** button again followed by the **OK** button.

Scheduled Recording

You can schedule a recording in the TV program or via the program info bar by just hitting the **Rec** button or you can

1. Select a future program and press the **OK** button.
2. Select **Record** then press the **OK** button.


Also you can schedule a recording manually.

1. Press the **Menü** button.
2. Select **Recordings** and then **New recording**.
3. Enter the options for recording.

Recording Conflict

When a scheduled recording starts on a different channel while you are watching a channel and recording three other channels, a recording conflict occurs.

1. Select the program you wish to cancel, then press the **OK** button.
2. Press the **Zurück** button to cancel the recording.

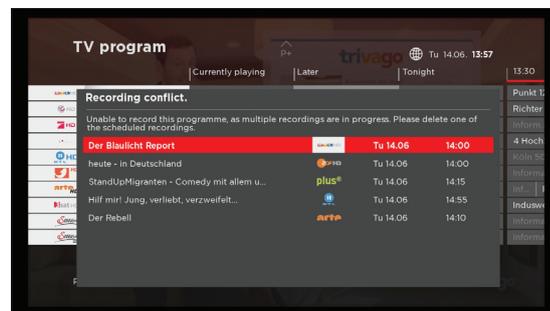

Managing Recordings

You can see the list of the scheduled, currently recording and recorded programs. Depending on whether you set the Disk Management to automatic or manual the free storage place is displayed differently.

If you set Manage Disk to automatic, the occupied space is only calculated by the recordings you already did. If you have set Manage Disk to manual however the occupied storage space is calculated by the recordings you already did and those that you have scheduled.

You can also manage the programs you recorded.

1. Press the **Menü** button.
2. Select **Recordings**.
3. Select one of your recorded programs and press **OK**.
4. Select an option.
 - **Play**: Plays the recording. Depending on the channel you recorded the program from you can start only from the beginning or from any desired point.
 - **Delete**: Deletes the recording.
 - **Lock recording**: Locks the recording from deletion when Manage Disk is set to Automatic. The recording can still be deleted manually.
 - **Organise**: You can create a folder, move the recording to the folder you want, and rename the recording using the keyboard.
5. Press the **OK** button.




Vodafone Select

Vodafone Select allows you to watch TV programs or movies over a network as part of an interactive broadcasting system (if already available in your region).

1. Press the **Menü** button.
2. Select **Vodafone Select**.

Vodafone Select not only consists of a large library of recent and classic movies that you can order or purchase, but also offers you a broad selection of TV station media centres where you can watch or rewatch almost everything they air.

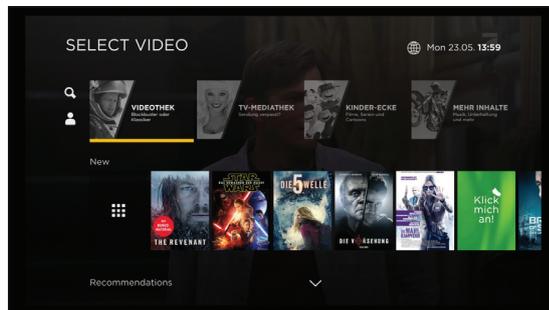

Search


To use the search functionality it is necessary to connect your box to the internet. The results you will be shown consist of current TV programs, your recordings and titles you can find in our online video library Vodafone Select.

1. Press the **Menü** button.
2. Select **Search**.

By Title or Actor

You can search for a program by entering a title or an actor's name.

1. Select **Title** or **Actor**.
2. Enter a keyword by using the arrow and **OK** buttons to navigate through the on-screen keyboard. When the title or actor you are searching for pops-up as a result in the list on the right select List and navigate to the desired result to select it with **OK**.

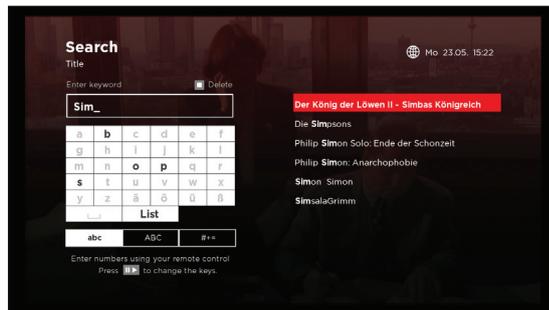

By Categories

You can search for a program by category.

1. Select **Categories**.
For some categories more input is needed. E.g. if you select Spielfilm as category, another list is displayed in which a subset should be selected, such as Action, Comedy, Krimi etc.
2. Press **OK** to view search results.

Settings

The settings are partitioned into Basic and All settings. 'Basic settings' consists of the most relevant settings, whereas All settings contains all general settings and special ones such as the Tutorial, Messaging, Service, System update and diagnosis.

Note: Press the **Exit** button to exit. Press the **Zurück** button to go to the previous menu.

1. Press the **Menü** button.
2. Select **Settings**.

Basic Settings

Internet setup

If you haven't already set up an internet connection when going through the first installation process or if you have to set up a new internet connection with another network. You can do it here. Make sure that you have either connected the Wi-Fi stick to one of the USB ports of your receiver or that there is a LAN cable connected to your receiver that connects it to a router.

Via LAN cable

1. Select **Internet setup**.
2. Select **Via LAN cable**.

Your digital receiver detects the internet connection and sets it up automatically.



Via the Wi-Fi stick

1. Select **Internet setup**.
2. Select **Via the Wi-Fi stick**.

- **Continue with Wi-Fi security key:** Your digital receiver now searches for available networks. Select the wireless network you want. Enter your Wi-Fi security key. The message 'Your digital receiver is now connected to the Internet' is displayed.
- **Continue with WPS:** Your digital receiver detects the Internet connection and sets it up automatically.

Note:

- If you haven't set up another password, you can find the Wi-Fi security key on the bottom of the router or in its manual.
- You can use WPS if your Wi-Fi router supports WPS. Press the WPS button on your Wi-Fi router. The router will then connect to the Wi-Fi stick.
- Select **skip Internet set-up** to skip the Internet setup.

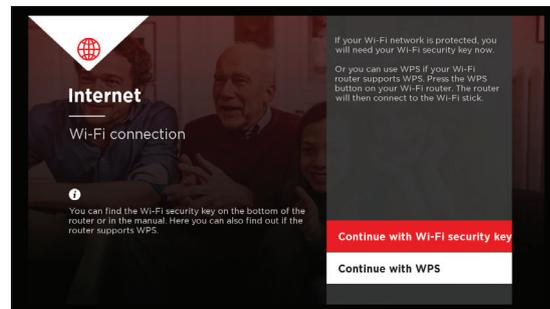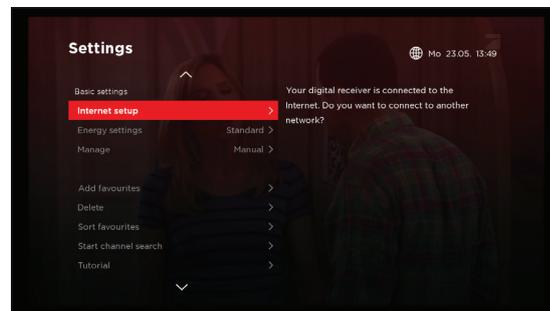

Settings

Energy settings

You can decide whether

- Your receiver consumes less energy overall, but starts slowly, or
- Your receiver starts rapidly but has a higher overall energy consumption.

1. Select **Energy settings**.
2. Select an option.

- **Standard:** This mode helps you minimize your energy consumption. For this reason your digital receiver takes longer to start and switches off automatically if the remote control is not used. The duration until automatic switch-off can be determined.
- **Energy-saving mode:** In the Energy-saving mode your Digital Receiver consumes little energy on standby. In contrast to the standard mode the receiver does not switch off automatically.
- **Active (scheduled):** In the quick start mode you can set on which days, at what time and for how long your receiver automatically turns on from standby mode to active mode. The receiver switches to active mode for the duration you determined.
- **Active:** In the Active mode your digital receiver is always available and boots within seconds. In this mode the device has the highest power consumption.

3. Press the **OK** button to save your settings.



Settings

Manage

You can decide, if your receiver should automatically delete the recordings you have already viewed.

Add favourites

You can add channels to your favourite list easily.

Delete

You can delete channels from your favourite list.

Sort favourites

You can sort favourite channels by category or alphabetically.

Start channel search

Searches for all available channels and adds them into your line-up.

Tutorial

You can find helpful information about your digital receiver.

Message

You can receive the latest information from Vodafone Kabel Deutschland.

Declaration of consent

You will be asked to agree to receive marketing messages provided from Vodafone Kabel Deutschland.

Menu

You can set your menu as a start screen.

Change PIN

You can change your parental protection PIN into the four digits you can remember best. They however mustn't be four identical digits.

PIN VoD purchase

Before purchasing a VoD item you will be asked to enter your PIN in order to legitimate the purchase.

Change FSK-18-PIN

You can change your adult PIN into the four digits you can remember best. They however mustn't be four identical digits.

Data privacy

You can find the data privacy information.

Settings


All Settings

General

Language

Allows you to set the on-screen and subtitle language.


1. Select **All settings > General > Language**.
2. Select **Menu Language** or **Subtitles**.
3. Select the language you want.
4. Press the **OK** button.

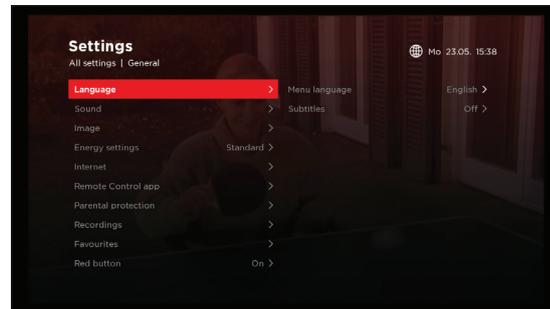

Sound

Lets you choose the digital audio output mode.

1. Select **All settings > General > Sound**.
2. Select an option
 - **Audio output:** Select Mono or Stereo.
 - **Dolby Digital on HDMI/SPDIF:** Outputs Dolby Digital from HDMI/SPDIF if set to **On**. If set to **Off**, the audio output is in PCM.
 - **For visually impaired people:** This audio is supplemented with sounds that aid understanding the action on screen.
3. Press the **OK** button.

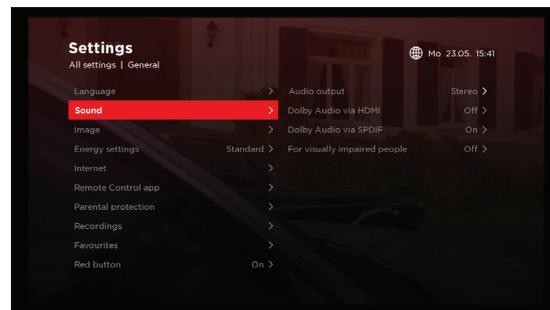

Settings



Image

Changes the way the image is brought to your screen.

1. Select **All settings > General > Image**.
2. Select an option
 - **TV scart:** FBAS – RGB – S-Video
 - **VCR scart:** FBAS – S-Video
 - **SCART control:** Switch aspect ratio between 4:3 and 16:9 modes when the SCART cable is connected.
 - **HDMI screen resolution:** 576i - 576p - 720p - 1080i
 - **Start channel:** Tunes the default channel when powering on.
 - **Menu:** Set to start with the home screen or with live TV.

Energy Settings

1. Select **All settings > General > Energy Settings**.
2. Select an option.
 - **Standard:** This mode helps you minimize your energy consumption. For this reason your Digital Receiver takes longer to start and switches off automatically if the remote control is not used. The duration until automatic switch-off can be determined.
 - **Energy-saving mode:** Your Digital Receiver consumes little energy on standby. In contrast to the standard mode the receiver does not switch off automatically.
 - **Active (scheduled):** You can set on which days, at what time and for how long your receiver automatically turns on from standby mode to active mode. The receiver switches to active mode for the duration you determined.
 - **Active:** Your digital receiver is always available and boots within seconds. In this mode the device has the highest power consumption.

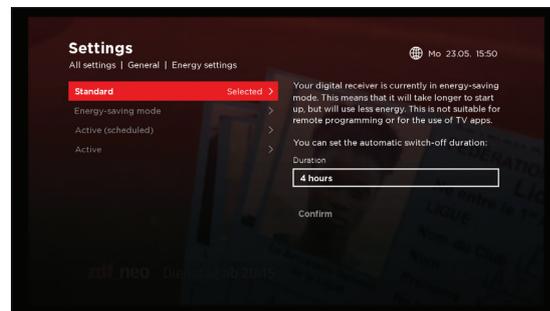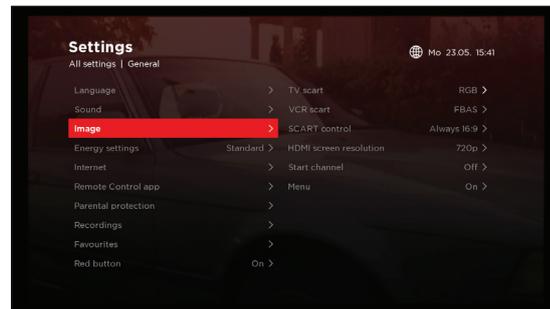


Settings

Internet

If you connect your receiver to the internet, additional offers from Vodafone Kabel Deutschland will be available to you. You can set-up an internet connection either through the wireless stick or via network (LAN) cable.

1. Select **All settings > General > Internet**.


- **Internet setup:** Sets up an internet connection via LAN cable or Wi-Fi stick.
- **Display settings:** View the Internet settings of your digital receiver.
- **Test connection:** Test your Internet connection.
- **Turn off:** Turn off the Internet connection.
- **Data privacy:** View the privacy information.

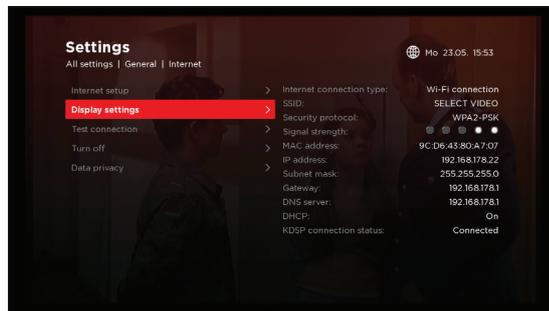

Remote control app

Select **All settings > General > Remote Control App**.

- **Link app:** Control your digital receiver using your remote control or smartphone. The app is available free of charge in the App store and Google Play store.
- **Delete linked apps:** Delete the linked app(s).

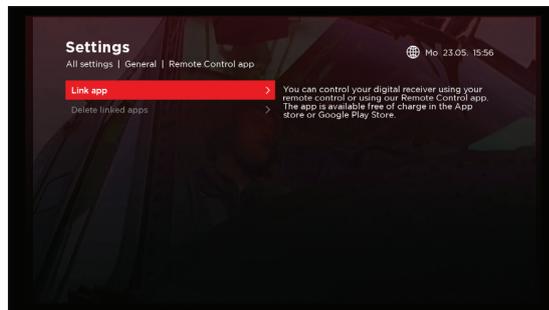

Settings

Parental protection


You have two different kinds of PIN codes that you can change here separately.

Select **All settings > General > Parental protection**.

- **Change PIN:** Change PIN.
- **Change FSK-18PIN:** Change the adult/FSK-18 PIN to prevent that your child gets access to adult content.
- **PIN VoD purchase:** Sets to enter your PIN when you purchase new VoD content.
- **PIN for recordings:** Sets the PIN for recordings to prevent your child from viewing the locked recordings.

Note:

- The default parental control PIN is in the letter that your Smartcard came in.
- If you have forgotten your PIN, contact your cable operator.
- If you enter your PIN wrong three times in a row you will be blocked from changing the PIN for 10 minutes.

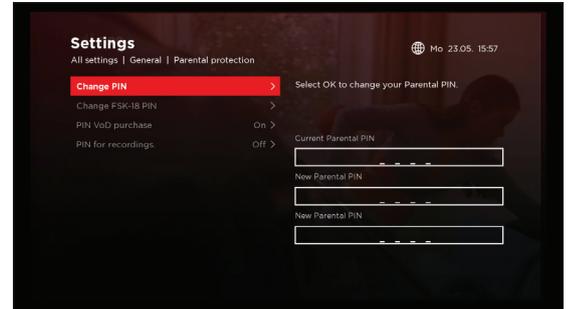


Recordings

You can schedule a recording manually at any time you desire.

1. Select **All settings > General > Recordings**.

- **Recording:** Enter the recording details.
- **Manage:** Set to delete the oldest recordings automatically when the disk space is full.
- **Delete all:** Deletes all recordings to free up disk space.
- **Extend recordings:** Adds time to the beginning and end of every recording in order to prevent missing scenes due to program changes.

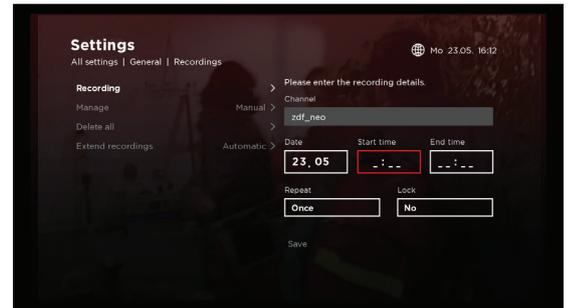

Settings

Favourites

Select **All settings > General > Favourites**.

- **Add favourites:** Select the channel to add to the favourite list.
- **Delete:** Select the channel to delete from the favourite list.
- **Sort favourites:** Select the channel and press the **OK** button. Move the channel to the position you want and then press the **OK** button.



Red button

You can assign the shortcut to the VoD shop to the Red button on your remote control.




Settings

Tutorial

Find helpful information about your digital receiver.

Select **All settings > Tutorial**.

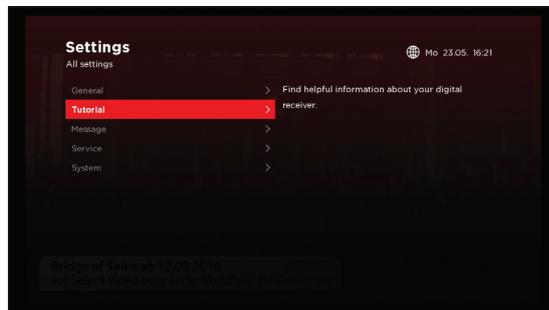

Message

If you have agreed to receiving marketing messages provided from Vodafone Kabel Deutschland in the Declaration of consent, here is one of the access points to them.

Select **All settings > Message**.

Mailbox

View the messages sent to you from Vodafone Kabel Deutschland.

Opt in

Give your consent to receiving messages from Vodafone Kabel Deutschland.

Service

View all contact information from Vodafone Kabel Deutschland.

Select **All settings > Service**.

Hotline


The number you can contact if you experience any kind of trouble with one of your Vodafone Kabel Deutschland devices or services.

Device information

All the information you need on your device, such as Manufacturer, Model Name, STB Serial No., Hardware and Software version and more.

Smartcard

View all information on your smartcard (serial number, version, status, date of the last update of the program guide).

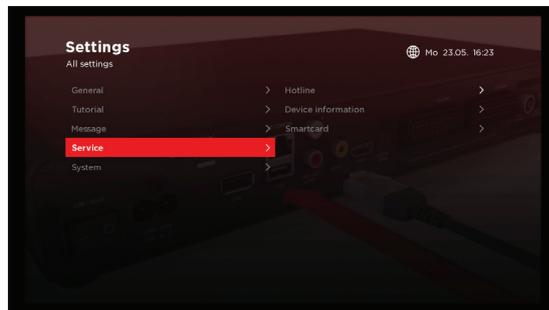

System update

All information on Software updates and searching additional channels.

- **Software update running:** Set to update the software automatically or manually.
- **Search for new software:** If manual Software Update mode is selected and a new Software is found you can choose between **Install now**, **Install from standby** or **Install never**. If you choose automatic Software Update mode do not power off the receiver. If you refuse to download the new software, you may miss out on additional services.
- **Channel search:** Searches for available channels. You can choose to do this manually or set it on automatic.
- **Delete extra channel:** Delete the additional channels detected by frequency based scan.
- **Search for extra channel:** Search for additional channels which may not be found by the installation wizard.
- **Start channel search:** Search channels automatically.
- **Reset to factory settings:** When resetting your receiver to factory settings you can choose to either keep your recordings or delete them all.
Note that once you perform the factory reset, all user settings will be reset to the factory settings. After completing the factory reset, the installation wizard will appear automatically after a few seconds.
- **Load programme information:** Update the electronic program guide if necessary.




Settings

System diagnosis

See an overview of your system's status.

- **TV signal:** View the number of TV and radio channels scanned by the receiver and broadcast signal strength.
- **VoD signal:** View the signal strength on certain VOD frequencies.
- **HDMI:** View the currently configured HDMI resolution, HDCP status and information about the TV set connected through HDMI.
- **Screen:** View the name and number of the channel you are currently watching, the TV picture mode and the settings on TV and VCR SCART.
- **Sound:** View audio information such as On-screen language, Subtitle mode, Dolby Digital modes.
- **LAN/Wi-Fi:** View the current status of LAN/Wi-Fi settings.
- **Feedback channel:** View the availability status of DNS, ACS, VOD portal, VOD SRM servers, IP Connection.
- **Test Internet connection:** Test IP connection.
- **Signal check:** Check the signal.

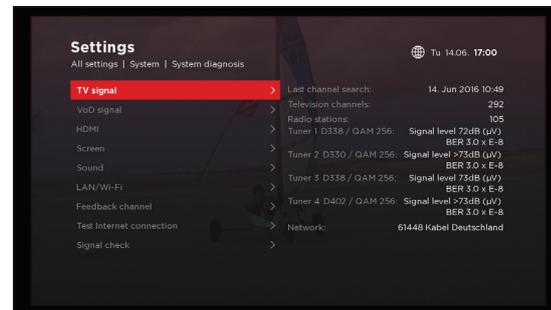

Specification

Tuner & Channel	
Number of Tuners	4
RF input Connector	IEC 169-2, female (PAL)
RF loop through Connector	IEC 169-2, male (PAL)
Input frequency range	51 MHz to 862 MHz
Input Impedance	75 Ω unbalanced
Signal Level	-15 to +15 dBμV @ 64, 128-QAM, -12 to +15 dBμV @ 256-QAM
Modulation	QAM (DVB-C), Compliant to EN 300 429
Symbol rate	3 to 7 MHz
Constellation	16, 32, 64, 128, 256-QAM
Audio/Video Decoding	
Audio Decoding	MPEG I Layer 1,2,3, AAC, AAC+ Dolby Digital, Dolby Digital Plus
Audio Mode	Dual mono/Stereo/Joint stereo
Video Decoding	SD MPEG2, HD MPEG4 and SD MPEG4 (H.264/AVC)
Video Format	4:3, 16:9, Letterbox
Video Resolution	1080i, 720p, 576p, 576i
Memory	
Flash Memory	4MB NOR Flash + 256MB NAND Flash
RAM	320 MB
EEPROM	32 KB

Audio/Video In/Out	
Video	TV-SCART(CVBS,RGB), RCA(CVBS), HDMI
Audio	TV SCART, S/PDIF(Digital Audio Output), RCA(Audio L/R), HDMI
Hard Disk	
USB	USB 2.0 Host (5V  500mA Max.)
RJ-45	Ethernet 10/100Mbps
Power Supply	
Input Voltage	90-250V a.c., 50/60Hz
Type	SMPS
Power Consumption	Max. 35 W (Standby: Under 1 W)
Protection	Separate internal fuse. The input should be protected against lightning.
Physical Specification	
Size (w/h/d)	380 mm × 55 mm × 245 mm
Weight	2.8 kg

Service and Support

In the design of this product was taken great care to ensure the maximum quality possible. However in the rare event that you have any problems with the product and need advice or support you can be confident that we will do our best to help you. If you experience technical problems with the product you can call Vodafone Kabel Deutschland directly:

0800 / 52 666 25 (call free of charge from Germany)
Mon - Sun, 0:00 - 24:00

Trouble Shooting

Before contacting the customer service center, make sure to read the tips below carefully. If the problem persists after you complete the following procedure, please contact HUMAX customer service for further instructions.

General

Problem	What to Do
No light on the STANDBY button on the front panel	<ul style="list-style-type: none"> • Check the main power cable and make sure it is plugged into a suitable power outlet. • Check that the mains supply is switched on. • Connect the power cable to a different power outlet. • Check that the power switch is on at the rear of the product (where applicable).
No picture	<ul style="list-style-type: none"> • Check the main power cable and make sure it is plugged into a suitable power outlet. • Check that the mains supply is switched on. • Connect the power cable to a different power outlet. • Check that the power switch is on at the rear of the product (where applicable).
Poor picture	<ul style="list-style-type: none"> • Make sure there is no mobile phone or microwave oven near the product. • Keep the power and the RF cables apart from each other.
No or poor sound	<ul style="list-style-type: none"> • Check that your AV cable is connected correctly. • Check the volume levels of your TV set and the product. • Check if the product or TV is on mute. • Check audio type or soundtrack option (where applicable).
Remote control does not operate	<ul style="list-style-type: none"> • Check that your AV cable is connected correctly. • Check the volume levels of your TV set and the product. • Check if the product or TV is on mute. • Check audio type or soundtrack option (where applicable).
The product makes a humming noise	<ul style="list-style-type: none"> • The noise is from the fan; the hard disk is operating normally. This kind of noise is inevitable but seldom noticeable.

Appendix

Channel

Problem	What to Do
Channel search does not work	<ul style="list-style-type: none">• Make sure that your cable is connected correctly.
Cannot watch scrambled channels	<ul style="list-style-type: none">• Check that you have the appropriate smartcard. Reinsert the smartcard and make sure it initialises correctly.• Check in the Settings menu that the product is detecting the smartcard.• Check in the Settings menu that you have a valid and working subscription to the channels you wish to view.• Ensure that the smartcard is not damaged.
Cannot watch pay channels	<ul style="list-style-type: none">• Check in the Settings menu that you have a valid and working subscription to the channels you wish to view.• Contact your network operator for more information.

Recording and playback

Problem	What to Do
Cannot schedule a recording	<ul style="list-style-type: none">• Check that no previous schedules are conflicting with the new schedule.
Cannot record programmes	<ul style="list-style-type: none">• The hard disk is full. Delete unnecessary programmes and make space for new recording.• Check if recording conflicts with another channel. Stop the current recording or wait until the recording is finished.• Check that the product is switched on when recording starts.
Cannot operate TSR (Time Shifted Recording)	<ul style="list-style-type: none">• TSR may not be available during recording. Wait until recording is finished.• Delete unnecessary recordings and make space for new recording.
Cannot play back	<ul style="list-style-type: none">• To playback the recorded file of a scrambled channel, use the smartcard. In case it has been a long time since you last recorded, this may not work. Contact the cable operator.• The signal during recording may be weak or the hard disk too full.
Cannot change channels while recording	<ul style="list-style-type: none">• Certain channels may not be changed due to restriction of the tuner or connection type.

Appendix

Network

Problem	What to Do
Cannot connect to the Internet	<ul style="list-style-type: none">• Check if the network is connected correctly.• If wireless network is not available in your home, use a LAN cable to connect the product and the router.• Turn off the product and the router and then on to refresh the network.• Move the product closer to the wireless router or remove any obstacles from between them.• If you use a LAN cable, change a LAN cable.• Check the network security key.

Software update

Problem	What to Do
Cannot update new software	<ul style="list-style-type: none">• You can get an update. If you put the product into STANDBY mode over the night it will search for new software. Updates will be downloaded automatically. You can search for new software in the Settings area (Menü > Settings > General settings > System Update > Search for New Software). If the product does not find newer software, this means that no software update is available.

Setting Universal Remote Control

Set up the universal remote control so that you can control your TV with this universal remote control. The LED lights red when the TV mode is selected.

Programming the universal RCU

There are two ways to set up the universal remote control.

Brand Set Up

1. Press the hold **TV** and **Menu** buttons for 3 seconds. The LED blinks twice.
2. Enter the 4 digit code for the TV code set. Every time a number is entered, the LED blinks. When the fourth digit is entered, the LED blinks twice if the entered code is valid. If the code is invalid, the LED blinks 6 times and your digital receiver exits the set up mode. Repeat the previous steps.

Note: Press the **TV** and **0** simultaneously for 3 seconds to return to the default.

Auto Brand Search

The top brands have a Brand ID which has four digits with the most significant digit a 9. You do not have to enter the TV Code Set repeatedly when the code is invalid.

1. Press and hold the **TV** and **Program** buttons for 3 seconds. The LED blinks twice.
2. Enter the 4-digit code for Brand ID. Every time a number is entered, the LED blinks. When the fourth digit is entered, the LED blinks twice and remains on. It searches through all code-sets linked to the TV automatically.
3. Press the **STANDBY** button continuously. The LED turns off during transmission. Repeat until the TV turns off.

4. When the TV turns off, release the **STANDBY** button. Turn on the TV with the original TV remote control.
5. Press **TV** button for 3 seconds to confirm the code.

Querying the 4-digit code

You can find out the 4-digit code of the TV universal code that is active.

Pressing **1** and **Info** buttons will blink out the first digit of the TV code number; **2** and **Info** buttons will blink out the second digit, **3** and **Info** the third digit and **4** and **Info** buttons the fourth digit. No blinks indicate a zero.

Note: The TV universal code number blink-out will return the universal code number and not the brand number.

Volume unlock set up

To switch on Volume Unlock

Press and hold the **Exit** and **Mute** buttons simultaneously for at least 3 seconds. The LED blinks twice to indicate a successful set-up.

Once this volume unlock is set up, the TV volume buttons send TV volume codes and the receiver volume buttons send the receiver volume codes.

To return to volume punch-through to TV

Press and hold the **TV** and **Mute** buttons simultaneously for at least 3 seconds. The LED blinks twice to indicate a successful set-up.

If a new TV code is programmed, the volume buttons send TV volume codes – in other words the receiver volume buttons punch through to TV codes.

Resetting Universal Remote Control

Press and hold the **Menu**, **Text** and **STANDBY** buttons simultaneously for 3 seconds. The LED blinks twice.

After reset, the LED will blink two times again.

Appendix

Brand name	Brand ID	Code Set									
A.R. Systems		0583									
Accent		0583	0064								
Acec		0039									
Acer	9001	1366	1671	2217	1536	1430					
Acoustic Solutions		1694									
Adcom		0652									
Admiral		0120	0445	0114	0291						
Advent		0903									
AEG	9002	0633	2123	1399	2048	1064	1583	2193	1582	1190	2266
Agef		0114									
Aim		0064	0583								
Aiwa	9003	0728	0732	1943	1532						
Akai		0388	0235	0398	0064	0460	0218	1892	1286	1275	
		1962	2048	2123	1335	0633	0613	1064	0500	0675	
		0839	0583	0575	0507	0658	0291	0205	0062	0036	
		0245	0579	0741	0742						
Akiba		0245	0064	0583	0321						
Akura		1694	1672	1797							
Alkos		0062									
Allorgan		0321									
Allstar		0064	0583								
Amoi	9004	1556	2369								
Amstrad		0036	0291	0398	0245	0064	0583	0460	1064	0675	2009
		1847									
Anam National		0677									
Andersson	9005	1190	1612	1176							
Anglo		0036	0291								
Anitech		0036	0291	0064	0583						
Ansonic		0397	0064	0583	0036	0695	0438	0274	1464	0039	
AOC	9006	1615	0652	2138							
Apollo		0500									
Ardem		0513	0064	0583							
Arena		0064									
Aristona		0583	0064	0039							
Art Mito		1612	1847								
ASA		0132	0373	0097	0114						

Appendix

Brand name	Brand ID	Code Set									
Asberg		0064	0583								
Asora		0036									
Astro		0667									
Atec		1633									
Atlantic		0064	0583								
Atori		0036									
Audiosonic		0064	0583	0136	0741	0742	0397	0291	0245	0513	2010
Audioton		0513	0397	0291							
Autovox		0114	0571	0376	0274						
Avol		1847									
Axxent		0036									
B&D		1244									
Baier		0903	1399	2266							
Bang & Olufsen	9007	0592	0647	0114	1647						
Barco		0579									
Basic Line		0064	0695	0583	0036	0245	1064				
Bauer		1642									
Baur		0562	0222	0539	0064	0583	0581	0218	0388	0571	0376
		1532	1037								
Beaumark		0205									
Beko	9008	0741	0513	0742	0064	0633	1679	2227	1827	0397	0835
Bennett		0583	0064								
BenQ	9009	1589	1601								
Beon		0064	0583	0445							
Best		0397	0448								
Bestar		0064	0583	0397							
Black Diamond		1064	0583	1190							
Blackway		0245									
Blaupunkt	9010	0581	0222	0562	0218	0227	0354	0197			
Blue Media		1633									
Blue Sky		0064	1064	0741	0514	0695	0742	0835	1390	1341	1943
		1270	0652	1679	0651	1936	0583	0245			
Boman		1399									
Bondstec		0274									
Boots		0036									
Bosch		0354									

Appendix

Brand name	Brand ID	Code Set									
BPL		0064	0583								
Brandt		0652	0136	0223	0314	0362	0498	0370	0587		
Brandt Electronique		0314	0362								
Brinkmann		0064	0583	0695	0546	0445	0513				
Brother		0291									
Bruns		0114	0513								
BSR		0321	0579	0388							
BTC		0245									
Bush	9011	1064	1679	0741	1943	0695	1672	0546	1694	0064	0583
		1736	335	0805	0614	1286	2154	0688	1583	0514	1176
		1353									
Canton		0245									
Capsonic		0291									
Carad		0637	0064	0583	0695	1064					
Carrefour		0097	0064	0583							
Cascade		0036	0064	0583							
Casio		0064	0583	0376							
CAT	9012	1709	2182								
Cathay		0064	0583								
Centrum	9013	1064									
Centurion		0064	0583								
Century		0114	0274								
CGE		0101	0445	0274	0579	0397					
Cimline		0036	0262	0245							
Cinex	9014	1583	0675								
City		0036									
Clarivox		0445	0064	0583	0097						
Clatronic	9015	1399	0633	0245	0064	0583	0741	1704	0036	0398	0675
		0397	0274	0291	1190						
Clayton		1064									
Concorde		0036									
Condor	9016	0036	0397	0438	0445	0064	0274	0291			
Conia		1672									
Conrac		0835									
Conrad		0064	0583								
Contec		0036	0038	0291	0064	0583					

Appendix

Brand name	Brand ID	Code Set									
Continental Edison		0136	0223	0314	0514						
Cosmel		0036	0064	0583							
Crosley		0114	0274	0101	0579						
Crown	9017	0064	0513	0633	1064	0742	0514	0235	0445	0397	0741
		0036	1679	0695	0448	0680					
CS Electronics		0245	0274								
CTC		0274									
Cybertron		0245									
Cytronix		1325									
D.Boss		1501	0064								
Daewoo	9018	0661	0688	0526	1936	1822	0064	0651	2302	0741	0583
		0036	0907	1334	0903	0892	1639	0245	1164	2064	
Dainichi		0245									
Dantax		0397	0513	0741	0633	0742					
Daytek		1403									
Daytron		0036	0064	0583							
de Graaf		0235	0575								
Dell		1430									
Denver	9019	1704	1216	2077	0614	2123	2048	1661	1872	2272	0064
		2015	1736	1847							
Desmet		0064	0583	0036	0114						
Diamant		0064	0583								
DiBoss		0064	0583	1501							
Digatron		0064	0583								
Dighome		1694									
Digiline		0064	0583	0132	0695						
Digimate		0917									
Digital Device		1633									
Digitek		1736									
Digivision		0388									
DigiX		0907									
DiK		0064	0583								
Dixi		0036	0064	0583	0274	0114					
DMTECH	9020	2028	1991								
Domland		0421									
Doric		0376									

Appendix

Brand name	Brand ID	Code Set									
Dream Vision		1731	1781								
DTS		0036									
Dual	9021	1064	2268	0064	1229	0546	0579	1264	1164	0571	0805
		0421	1294	0376	0370	1399	1190	0658	1176	2059	0379
Dumont		0114	0097								
Dunai		0571									
Durabrand		0064	1464	0583	2015	1679					
D-Vision		2009	0064	0583							
Dynatron		0064	0583	0039							
e:max	9022	1399	1558								
Edison-Minerva		0514									
Electrion		1612									
Elekta		0036	0064	0583	0291						
ELG		0064	0583								
Elin		0064	0583	0132	0575	0388	0376	0036			
Elite		0245	0064	0583							
Elta		0036	0291								
Emco		0274									
Emerson		0114	0274	1936	0513	0397	0695	0064	0583	0398	0097
		0388	0651								
Emprex		1816									
Epson	9023	0858									
Erres		0064	0583	0039							
ESC		0064	0583								
Estèle		0579									
Etron		0064	0583	0036							
Eurofeel		0291									
EuroLine		0064	2077								
Euroman		0291	0064	0583	0448	0397					
Europa		0064	0583								
Europhon		0064	0583	0274	0579						
Evesham		1694									
Exquisit		0064	0583	0274							
Fast		1928									
Fenner		0036									

Appendix

Brand name	Brand ID	Code Set									
Finlux	9024	1694	0064	0583	1583	2009	1612	1398	0132	1275	0373
		0741	0835	0658	0519	0507	0500	0445	0579	0742	0097
		0114	0438								
Firstline		0064	0583	0695	0741	0651	0036	1390	1190	1398	1639
		1335	0376	0262	0235	0388	1064	0835	0321	0274	0579
		1936	0438	0571							
Fisher		0235	0397	0114	0388	0579	0571	0376			
Force		1176									
Formenti		0064	0583	0513	0114	0579					
Formenti-Phoenix		0579									
Fortress		0120	0114								
Fraba		0064	0583	0397							
Friac		0036	0064	0583	0448	0397	0526	0682	0637		
Frontech		0274	0291	0376	0036						
Fujitsu		0036	0379	0064	0583	0388					
Fujitsu General		0036									
Fujitsu Siemens	9025	1693	1325	0835	2201	1275	1190	1286			
Funai	9026	1844	1421	1064	1693	1622	0695	0741	0291	0321	
Future		0064	0583								
Galaxi		0064	0583	0388							
Galaxis	9027	0397	0064	0445	0583						
Galeria		0036									
GBC		0579	0036	0245							
GE		0370									
GEC		0388	0376	0064	0583						
Geloso		0274	0036	0579							
General Electric		0370	0314								
General Technic		0036									
Genexxa		0245	0064	0583	0036						
Gericom	9028	1244	1633	0892	1325	1233	0907	0835	1748		
Goldfunk		0695									
GoldStar	9029	0064	0583	0274	0388	0741	0633	0036	0136	0742	0397
Gooding		0514									
Goodmans		1286	1275	1822							
Gorenje		0397	0448								
GPM		0245									

Appendix

Brand name	Brand ID		Code Set								
Graetz	9030	0388	0398	1190							
Gran Prix		0675									
Grundig	9031	0222	1250	0562	0097	1609	0581	0064	0218	0561	2227
		1286	1827	0205	0583	1064	1694	0784	1403	0470	1335
		2266	2152	0514	2154	1962	1943	0397	0036	0614	0370
H&B		0835	2028								
Haier	9032	1642									
Halifax		0291									
Hanimex		0245									
Hanns.G		1640									
Hannspree	9033	2054	2245	1640	1378	2241					
Hanseatic	9034	0546	0064	0661	2028	0526	0688	0652	0421	0741	1991
		0835	0388	0513	0583	0036	0571	0321	0114	0376	0397
Hantarex		0036	0064	0583							
Hantor		0064	0583								
Harsper		0892									
Harwa	9035	1223	1534	1296							
Hauppauge		0064	0583								
HB		1399									
HCM		0036	0064	0583	0245	0445	0291				
Hedzon		0583	0064								
Hema		0036									
Highline		0291	0064	0583							
Hisense	9036	1390	2125	2064	1341						
Hit		0114									
Hitachi	9037	1603	0508	0605	1799	1064	2234	0526	0771	0064	1072
		1511	1221	0252	1508	2241	1881	0388	0661	0746	1190
		1612	1176	0824	2154	0507	0904	0519	1164	0575	0376
		0500	0911	1694	0579	0223	0370	0136	0132	0205	
Hitachi Fujian		0135	0252								
HMV		0114									
Höher		0741	1583	0892	1190						
Hugoson		1693									
Humax	9038	1566	1322	1848	1562						
Hyper		0036	0274								
Hypersonic		0388									

Appendix

Brand name	Brand ID	Code Set									
Hypson		0064	0583	0741	0742	0291	1064	0695	0513		
Hyundai	9039	1308	1495	1179	0903	1559	1403	0892	1321	1501	1583
		1633	0805	1639							
Iberia		0064	0583								
ICE	9040	0398	0245	0291	0064	0036					
Ices		0245									
Ict		0064	1164	0583							
ILSonic		1403									
Iiyama	9041	0904	0917	2281	1244						
Ikasu		1704									
Imperial	9042	0445	0579	0274	0101	0223	0397	0064	0376		
Indiana		0064	0583								
InFocus	9043	1457	1233								
Ingelen		0514	0637	0741	0388	1464					
Ingersoll		0036									
Inno Hit		0036	0064	0583	0245	0274	1190	1612			
Innovation		0546	0064	0583							
Innowert		0892	1325								
Interactive		0064	0583	0039	0114	0539	0354	0388	0397	0136	0438
Interbuy		0036	0064	0291	0274	0539	0583				
Interfunk		0064	0583	0039	0114	0539	0354	0388	0397	0136	0376
		0274	0227								
Internal		0064	0583	0651	0526	1936					
Intervision		0064	0398	0546	0513	0397	0421	0514	0245	0291	0274
		0036	0583								
Isukai		0245	0064	0583							
ITC		0579									
ITS		0064	0398	0245	0291	0036	0583				
ITT	9044	2152	0575	0388	0507	0376	0500	0373	0235	0613	0637
ITT Nokia	9045	0388	0575	0500	0507	0376	0373	0235	0613	0633	0637
		0658									
ITV		0291									
Jean		1540									
JEC		0062									
JGC		1704	1736								
Jubilee		0583									

Appendix

Brand name	Brand ID		Code Set								
JVC	9046	0680	1845	1680	0398	2145	0633	0758	0120	0245	0677
		0445									
Kapsch		0388									
Karcher	9047	0633	1583	0448	0805	0064	0637	0741	0397	0583	0291
		2152	1335	2009							
Kathrein		0583	0064	0907							
Kawa		0398									
Kendo	9048	1612	1064	0637	0438	1176	0397	0064	1464	0513	0675
		0274	0546	0262	1164						
Kennedy		0579									
Kiton		0583	0064	0695							
Kobra		1325									
Kolster		0064	0583	0376	0274	0245					
Konka		0064	0583	0398	0741	0445	0245	2056			
Kontakt		0514									
Korpel		0064	0583								
Korting		0114	0448	0397							
Kotron		0291									
Koyoda		0036									
Kriesler		0039									
Kuba		0376									
Kuba Electronic		0376									
Kyoshu		0445	0291								
L&S Electronic		0892	0741								
LaSAT		0513	0397								
Lava		1501									
Leader		0036									
Lemair		0438									
Lenco		0064	0036	1822	0583	0614	1064	2010			
Lentec		1558									
Lesia		0274									
Levis Austria		0064	0583								
Lexsor		1223	1534								
Leyco		0291	0064	0583	0321						
LG	9049	1450	2209	0205	1869	0741	1690	1867	0064	1332	1664
		1748	0583	1566	0742	0136	0274	0388	0397	0036	

Appendix

Brand name	Brand ID	Code Set									
Liesenkötter		0064	0354	0039	0583						
Lifetec	9050	0064	0695	1064	1164	0546	2028	0245	0036	0741	0682
		1275	1286	0291							
Loewe	9051	0539	0660	1911	0817	1863	0114	1817	0682	0397	
Logik		0038	0398	0907	1244	1064	2056	1672			
Logix		0695	0546								
Luma		0064	0438	0583	0036						
Lumatron		0064	0583	0388	0291						
Luxor		0507	0519	0376	0388	0235	0575	0373	0500	1064	0658
Madison		0064	0583								
Magnavox		0064	0583								
Magnum	9052	0675	0741	0064	0742	1316					
Mandor		0291									
Manesth		0064	0583	0262	0291	0062	0321				
Manhattan		0064	0583	0695	1064	0805					
Maqna	9053	1816	1633	1325	1729	1736					
Marantz		0064	0583	1559							
Mark		0064	0583	0036	0741	0742					
Master's		0526	0064								
Masuda		0398									
Matsui		1190									
Matsushita		0677									
Maxim		2009	1583								
Medialine		1233	1991								
Mediator		0064	0583	0039							
Medion	9054	0835	1275	0741	1768	0583	1176	1229	1583	0064	0907
		1064	1612	1694	0272	1164	1464	0695	1943	2028	0539
		1248	1233								
Megas		0637									
MEI		1064	0064	0583							
Meletronic		0373	0064	0539	0136	0370	0274	0222	0688	0741	1679
		0314	0583	0651	0661	0388	0218	0132	0036	0507	0519
		0438	0376								
Memorex		0036									
Memphis		0036									
Mercury		0064	0036	0583							

Appendix

Brand name	Brand ID		Code Set								
Metz	9055	0474	1560	0773	0394	0415	1190	0695	0114	0064	0222
		0562	0561	0581	0218						
Micromaxx	9056	1399	0741	0064	0695	0835	1064	2028			
Microrstar		0835									
Minato		0064	0583								
Minerva	9057	0514	1275	0581	0562	0222	0097	0561	0218	0135	
Minoka		0064	0583								
Mirai	9058	1693	2099	1879							
Mitsubishi	9059	0135	0064	0562	0539	1064	0583	0114	0235		
Mivar		0397									
Monaco		0036									
Morgan's		0064	0583								
MTC		0397	0376	0539	0388						
MTlogic		1335									
Multitec		0695	1064	1583	2009	0064	0583	0513			
Multitech		0376	0036	0513	0064	0397	0583	0274	0291	0579	
Musikland		0064	0245	0274	0583						
Mx Onda		1672	1847								
Myryad		0583	0064								
NAD		0892									
Naiko		0064	0633	0583							
Nakimura		0064	0583								
NEC	9060	2171	0197	0272	1731	0036	0064	0038	0526	0688	0732
		0731	0680								
Neckermann		0064	0218	0397	1532	1037	0561	0376	0114	0274	0438
		0539	0227	0581	0583	0579	0354	0445			
NEI		0064	0583	0398	1064						
Neon		1759									
Neovia		1233	0892	1991	1398	0903	1403				
Nesco		0274									
Netway		2136									
Neufunk		0064	0036	0583	0637	0245	0741				
New Tech		0064	0036	0583	0370						
Nikkai		1704									
Nikkei	9061	0741									
Nobliko		0097									

Appendix

Brand name	Brand ID	Code Set									
Nokia	9062	0500	0507	0388	0613	0575	0658	0633	0376	0373	0235
		0519	0637	0136							
Nordmende	9063	1440	0136	0587	2358	2356	0314	1316	0498	2359	0223
		0741	0362	0370	1612	2034	2028	1694	1286	0064	0222
Normerel		0064	0583								
Novak		0039	0064	0583							
Novatronic		0064	0132	0583							
Novita		1612									
Nurnberg		0388									
Oceanic		0388	0321	0235	0500	0575	0507	2028			
Odeon		0291									
Odys	9064	2416	1822								
Okano		0291	0036	0397	0064	0583					
Olidata		1403									
Omega		0291									
Onwa		0398	0245	0460							
Optoma	9065	1781	1701								
Orbit		0064	0583								
Orion	9066	2034	2032	0470	0741	0262	0682	0064	2135	0321	0583
		2027	0907	0382	1943	1223	0571	0291	0038	0036	
Orline		0064	0245	0583							
Ormond		0695	1064	0064	0583						
Osio		0064	0583								
Oso		0245									
Osume		0245	0064	0583							
OTIC		1672	2010								
Otto Versand		1532	1037	0120	0539	0064	0583	0274	0036	0370	0546
		0579	0218	0388	0262	0136	0321	0253	0561	0562	0222
		0571	0376	0581							
Pacific		0064	0583	1164	1264	0741	1064	0470	1399		
Palladium	9067	0397	0438	0376	0682	0741	0546	0064	0445	0218	1532
		0561	0227	0581	0354	0114	0274	0579	0583	1037	2009
Panama		0036	0291	0064	0583	0274					
Panasonic	9068	0677	1663	1677	0253	1337	1362	0575	0394	0388	0064
Papouw		0064	0583								
Pathe Cinema		0376	0579	0397							

Appendix

Brand name	Brand ID	Code Set									
Pathe Marconi		0136	0223								
Pausa		0036									
Perdio		0064	0583								
Perfekt		0064	0583								
Philco		0114	0101	0445	0274	0579	0397	0064	0583	0546	
Philips	9069	0583	1533	0064	1771	0666	1894	0632	1610	1522	2042
		1273	1482	0039	0799	0581	0036	0388	0227	0114	0370
Phocus	9070	1335	0741	1316	1679	1827					
Phoenix		0064	0583	0397	0513	0114	0579				
Phonola		0064	0583	0039	0114						
Pioneer	9071	1484	1287	0706	0193	0787	0064	0388	0136	0513	0539
		0397	0370	0314							
Pionier		0397	0513								
Plantron		0583	0291	0036	0064						
Playsonic		0741	0064	0742	1827	1679					
Polaroid	9072	1768	2152	1672	1550	1747					
Policom		0136	0223	0388	0097	0101	0114	0562			
Poppy		0036									
Portland		0651	1936								
Powerpoint		0514	0064	0583	1797						
Prandoni-Prince		0274	0388								
Prima		0036	0291	1296	1534	1223					
Prinz		0571	0376	0388							
Profex		0036	0388								
Profi		0036									
Profilo		1583									
Profitronic		0064	0583								
Proline		0064	0583	0652	0661	0438	0039	1403	1540	1064	
Prosonic		0695	0741	1759	2117	2272	0064	0583	0397	0398	
Protech		0064	0583	0036	0274	0376	0291	0445	0695	0579	0513
		1064									
Proview		1672									
Provision	9073	1064	1558	0064	0583	0741	1399				
Pye		0064	0583	0039	0114	0581	0376				
Pymi		0036									
QONIX		1661									

Appendix

Brand name	Brand ID	Code Set									
Quadral		0245									
Quasar		0274	0892	0036							
Quelle		0064	1532	1037	0038	0136	0539	0373	0448	0579	0036
		0583	0222	0227	0291	1064	0321	0274	0101	0354	0097
		0132	0695	0562	0571	0376	0581	0218	0388		
Radiola		0064	0583	0039							
Radiomarelli		0114	0274	0064	0583						
RadioShack		0064	0583								
Radiotone	9074	0695	0675	0064	0036	1064	0397	0445	0291		
Rank		0097									
RBM		0097									
Recor		0064	0583								
Rectiligne		0064	0583								
Red Star		1583									
Rediffusion		0388	0575	0373							
Redstar		0064	0583								
REEL Multimedia		1451									
Reflex		0064	0583	1064	0695						
Relisys		1768	1672	0904	1233	1325	1403	1612	1639	0892	0903
Revox		0064	0835	0583	0397						
Rex		0438	0274	0291							
RFT	9075	0291	0114	0397	0064	0583	0513				
Ricoh		0064	0583								
Roadstar		1064	0742	0741	0036	0064	1216	1582	1353	0583	0445
		0695	1464	0245	0291	1943					
Robotron		0114									
Rowa		0583	0291	0036	0614	0064					
Royal Lux		0448	0397	0362							
Rukopir		0583	0064								
Saba	9076	0652	0362	0136	0587	0370	0114	0223	0498	0314	1064
		0388	0575	0525	1615	0741	0583				
Sagem		0637	0857	1340	0645						
Saivod		0064	0583	0695	1064						
Salora		0376	0388	0575	0235	0579	0507	2152	1264	0658	1583
		0805	1398	1229							
Salsa		0362									

Appendix

Brand name	Brand ID		Code Set								
Samsung	9077	2078	0839	1485	0645	1339	0614	2164	1276	1657	1705
		2121	0671	0583	1262	0064	0036	0793	1659	0397	0546
		0291									
Sansui		0064	0583	0398	1962						
Santon		0036									
Sanyo	9078	0235	1235	1674	1612	0036	1694	0571	1676	1064	1675
		0135	0197	0731	0397	0038					
Save		0064	0583								
SBR		0064	0583	0039							
Schaub Lorenz	9079	0741	2127	1399	0513	0575	0633	1398	0388	1221	0376
		2152	1694	1390							
Schneider	9080	0583	1164	0064	1064	2155	1644	0695	0546	0379	0039
		0571	1501	0376	1395	0274	0741	1399	2009	0421	1264
		0398	0388	0245	0370	1943	0097	0675			
Scott		1216	2010								
Seaway		0661									
SEG	9081	1064	0695	1190	0064	1176	1936	1464	0651	0579	0583
		1928	1612	1694	0036	2088	0514	0661	0291	0245	0376
		0274									
SEI		0114	1532	1037	0579	0571	0376	0321	0064	0583	
Sei-Sinudyne		0321	1532	1037	0579	0571	0064	0583	0114		
Seleco		0438	0398	0291	0373						
Sencora		0036									
Sentra		0062	0245	0036	0376						
Sharp	9082	1686	0120	1220	1420	1614	2241	1846	1613	0321	0227
		0680									
Shintoshii		0064	0583								
Shivaki		0064	0583	0470	0205						
Siarem		0579	0114								
Siemens	9083	0222	0581	0218	0562	0227	0354	0064	0561	0583	0388
Siera		0064	0583	0039	0614						
Siesta		0397									
Silva		0388	0675	0064	0583						
Silva Schneider		1583	2193	0675	2152						
Silver		0388	0742								
Simz		1847									

Appendix

Brand name	Brand ID	Code Set									
Singer		0036	0114	0064	0583	0274	0362				
Sinudyne		1399	0114	0262	0321	0579	0388	0633	0571	0376	1532
		1037	0064	0583							
Sky		1540	1640	1633	1772	0688	0892	0907	0205	1531	1642
		1403									
Skymaster		0132									
Sliding		0892	0907	1399	1395						
Smaragd		0514									
Soemtron		0892	1325								
Sogo		1403									
Solavox		0388	0575	0064	0583						
Sonawa		0245									
Soniko		0064	0583								
Sonitron		0235	0397								
Sonoko		0064	0583	0036	0291						
Sontec		0064	0583	0397	0321	0036					
Sony	9084	1852	1532	1678	1778	1037	0038	1712	0861	0064	0120
		0197	0101								
Sound & Vision		0245	0064	0583							
Soundwave		0064	0583	0445	0742						
Standard		0064	0583	1064	0245	0036					
Starion		1064									
Starlite		0036	0579	0064	0583	0291					
Starmedia		2136									
Stenway		0245									
Stern		0291	0438								
Strato		0064	0583	0291	0036						
Strong		0064	0583	1190	1176	1064					
Sungoo		2064									
Sunic Line		0064	0583								
Sunstar		0398	0064	0583	0036	0291					
Sunstech		2028	1991								
Sunwood		0036	0064	0583							
SuperTech		0036	0064	0583	0245						
Supra		0036									
Susumu		0362	0245	0314							

Appendix

Brand name	Brand ID	Code Set									
Sutron		0036									
Swedx		1633									
Swissline		0274									
Swisstec		1531									
Sysline		0064	0583								
T+A		0474									
Tandberg		0394	0438	0136	0223	0388					
Tandy		0245	0274	0120							
Targa		0645	2272	1398	1294						
Tatung	9085	1747	1275	0064	0583	1399	1286	1583	1398	0038	
TCM		2028	1335	0741	1316	0835					
TEC		0036	0274	0498	0362	0579	0064	0583	0388		
Tech Line		0064	0583	0695	1464	1190					
Tech Lux		1216									
Technica		2009									
TechniSat	9086	1294	0667	0064	2182	0583	0682				
Technisson		0741	1316	1679							
Technotrend		1729	2182	1558							
Techvision		1736	1558								
Techwood		1190	1064	1694							
Teco		1340	2136	1550							
Tedelex		0633	0064	0036	0235	0614	0583				
Teiron		0036									
Telefunken	9087	0289	0652	0498	0128	0362	0136	0314	0525	0370	0587
		0101	0064	0513	0741	1583	0373	0223			
Telefusion		0064	0583								
Telemeister		0064	0583								
Telesonic		0064	0583								
Telestar	9088	2345	0064	2117	0583						
Teletech	9089	0064	0695	1064	0036	0274					
Teleton		0376									
Televideon		0579									
Televiow		0064	0583								
Tensai		0245	0064	0583	0321	0036	0132	0398	0274	0742	1064
Tenson		0036									
Tesla		0064									

Appendix

Brand name	Brand ID	Code Set									
Tevion	9090	1275	1164	0741	0583	1583	1064	2050	0695	0835	1768
		0675	2268	1316	1827	2117	1612	0892	1286	0064	
Texet		0036	0245								
Thomson	9091	0652	0587	0314	0370	0362	0498	0136	1615	0223	2155
		0064	0376	0579							
Thorn		0135	0136	0252	0370	0097	0128	0388	1532	1037	0562
		0038	0039								
Thorn-Ferguson		0362	0062								
Tokyo		0062									
Topline		0695	1064								
Toshiba	9092	1535	0535	0062	0745	1609	0580	1764	1316	0222	1457
		1064	0268	1583	1962	0645	0677	1972	1731	0097	1943
		0036	0136								
Towada		0376	0579								
Toyoda		0036									
Trakton		0291									
Triad		0583	0245	0036	0064						
Trio		1672									
Tristar		0291	0245								
TVTEXT 95		0583									
Uher		0064	0583	0445	0513	0397	0507				
Ultravox	9093	0064	0114	0274	0579	0583					
Unic Line		0064	0583	0500	0376						
United		1679	1847	1797	0583	1943	1064	0614	2009	2227	0741
		0064	0742								
Universum	9094	1064	0064	0373	1190	0695	1464	0500	0438	0132	0507
		1264	0036	0388	0291	0354	0562	0097	0519	1928	0579
		0038	0539	1176	0658	0397	0274	0645	0571	0581	0445
		0448	0197	0136	0101	0227	2201	0376	0222	1532	0321
		1037									
Univox		0064	0583	0114							
V7 Videoseven	9095	1244	1693	2281	0907	1403	1294				
Vestel		1064	1190	1612	1694	0064	0695	0579	0583		
Vexa		0036	0064	0583							
Videologic		0245									

Appendix

Brand name	Brand ID	Code Set									
Videosat		0274									
VideoSystem		0064	0583								
Viewpia		0903									
ViewSonic	9096	1569	1615	1540	2136	2138					
Vision		0064	0583								
Vistar		0388									
Vortec		0064	0583								
Voxson		0114	0064	0583	0445	0205					
Waltham		1064	0470	0445	0314	0064	0583	0695	0136		
Watson	9097	1064	1064	0546	0036	0695	1275	1403	1464	0354	0421
		0245									
Watt Radio		0571	0376	0579	0513						
Wega		0064	0583	0114							
Wegavox		0036	0064	0583							
Welltech		1679									
Weltblick		0064	0583								
Weltstar		1064									
Weston		0064	0583								
White Westinghouse		0064	0583	0651	1936						
Wilson		0583									
Windy Sam		0583									
World-of-Vision	9098	0907	1759	2028	0917	0892	1316	1325	0904	1633	1244
Xomax		1797									
Xoro	9099	1816	2094	1534	2173	1223	1244	1270	2172		
Xrypton		0064	0583								
Yakumo	9100	1640	2324								
Yamaha		0677	0824	1553	1603						
Yokan		0064	0583								
Yoko		0064	0583	0245	0291	0036	0448	0397	0274		
Yorx		0245									

Appendix

complete object files to the recipients, so that they can link them with the library after making changes to the library and recompiling it. And you must also give them these terms. We do this in your tool with a two-step method: (1) we copylink the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library. To protect each distributor, we want to make it very clear that there is no warranty for the library, as well as for any modifications by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by any modifications. Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the use of a free program by claiming patents. We place no restriction on the holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license. Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs. When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits only linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library. We call this license the "Lesser" General Public License because it does "less" and restricts the user's freedom than the ordinary General Public License. It also provides other free software developers less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for most libraries. The Lesser General Public license provides advantages in certain special circumstances. For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to be gained by limiting the free library to free software only, so we use the Lesser General Public License. However, it is important to protect the particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU library in non-free programs allows the user to link the library with other GNU operating system, as well as its variant, the GNU/Linux operating system. Although the Lesser General Public License is less protective of the users' freedom, it does ensure that the user of a program that is linked with the library has the freedom and the wherewithal to run that program using a modified version of the library. The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library." The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized person saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each license is addressed as "you". A library means a collection of software functions and/or data prepared so as to be conveniently linked into other programs. A program is a collection of those functions and data to form executable. The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work based on copying, modifying or translating a part or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the definition of copying.) For a "work that uses the Library" means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, object files, and control scripts, compilation and installation of the library. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents consist of a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what program that uses the Library does.
1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty, keep intact all the notices that refer to this License and to the absence of any warranty, and distribute a copy of this License along with the Library. You may charge a fee for the physical act of transferring a copy, and you may at your option charge warranty protection in exchange for a fee.
2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such

modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
a) You must cause the files to carry the same copyright notice as the library. b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change. c) You must cause the whole of the work to be licensed at no charge to all recipients under the terms of this License. d) If the library is a separate library, it must be distributed as a separate library. e) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument to a function or a table, you must make a good faith effort to ensure that, in the event an application does not supply such a function or table, the facility still operates, and performs whatever part of its purpose that it is intended to perform. f) If the Library is a separate library, the square roots has a purpose that is entirely well-defined independent of the application. Therefore, Section 2d requires that any application-supplied function or table used by this function must be optional. If the application does not supply it, the square root function must still compute square roots. These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to a work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library. In addition, mere aggregation of another work not based on the Library with its collection in a larger work, or the linking of a work and a library, or a distribution medium does not bring the other work under the scope of this License.
3. You may copy to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of this License. (If a newer version of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices. Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.
4. You may copy and distribute the Library (or a portion or derivative of it) under section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange. If distribution of object code is made by offering access to a designated place (e.g., a server), it is acceptable to copy the source code from the same place; satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source code along with the object code.
5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library." Such a work, in isolation, is not a derivative of the Library, and therefore is not covered by this License. However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library) that must be distributed under the terms of this License. It is therefore covered by this License. Section 6 states terms for distribution of such executables.
6. Each time you redistribute the Library (as material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not). Whether this is true is especially significant if the work can be linked with the Library or if it is a derivative of it. If the work is a derivative of the Library, it is covered by law. If it is not a derivative of the Library, it is covered by law. If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)
7. Each time you redistribute the Library (as material from a header file that is part of the work under the terms of Section 6), either you are explicitly conveying that work also fall under section 6, whether or not they are linked directly with the Library itself.
8. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice. You must make it clear the terms and conditions for the distribution of your own work and reverse engineering for debugging such modifications.
9. You must give prominent notice with each copy of the work that the Library is part of the distribution and that you have received, copied, or distributed the work under this License. If the work requires execution to display, you must supply a copy of this License. If the work during execution displays

copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also you must do these things in the following ways:
a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is a derivative of the Library, with the complete machine-readable "work that uses the Library," as object code and/or source code so that the user can modify the Library and then link to produce a modified executable, or to produce a new unit of executable code. This distribution requirement does not apply to the materials specified in Section 6a, above, for a suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library. If the user installs one of the modified versions, it must be interface-compatible with the version that the work was made with.
c) Accompany the work with a written offer, valid for at least three years, to provide the same materials specified in Section 6a, above, for a charge no more than the cost of performing this distribution.
d) Distribution of the work is made by offering access to copy from a designated place, or by equivalent access to copy the above specified materials from the same place.
e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.
For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include an executable form of the Library, but may be distributed in binary form with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself is a library. If the distribution includes any part of the Library, it must be in a form that permits the user to recompile the program. It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in a program. If you have a choice, you must prefer the Library.
7. You may place library facilities that are a work based on the Library side-by-side in a single library, together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:
a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
8. You may copy, modify, sublicense, link with, or distribute the Library or any portion of it under the terms of this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have their licenses terminated so long as such parties remain in full compliance.
9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivatives unless you are granted it by the copyright holder. You may not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.
10. Each time you redistribute the Library (or any work based on the Library), you must also redistribute a copy of this License along with the Library.
11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously the requirements of both the patent holders or other parties, then you may, as a consequence, you may not distribute the Library at all. For example, if a patent licensee would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then you must make a good faith effort to meet both the patent holder's requirements and the conditions of this License. If you are unable to do so, then your only alternative is to refuse to provide the Library. If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section shall nevertheless be enforceable. The requirements of the preceding paragraph are intended to apply only to those circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims. In the absence of such circumstances, you may act as you desire with free software distribution system which is implemented by public license

practices. Many people have made generous contributions to the wide range of software distributed through this system in reliance on consistent application of the terms of this License. Your decision to make the library will to distribute software through any other system and a license cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.
12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation to this license to limit distribution of the Library to permitted only in or among countries not thus excluded. In such a case, this License incorporates the limitation as if written in the body of this License.
13. The Free Software Foundation may publish revised and/or newer versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.
14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of source general.

NO WARRANTY
15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE). EVEN IF YOU SHOULD BE ADVISED BY A SERVICE PROVIDER THAT YOUR SYSTEM MAY BE AT RISK OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS
How to Apply These Terms to Your New Libraries
If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You do this by opening the distribution process under these terms (or, alternatively, under the terms of the ordinary General Public License).

If you have already written code under these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to the notice found on the line to give the public access to a copy of the notice and an idea of what it says. Copyright (c) Year name of author This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation, either version 2.1 of the License, or (at your option) any later version. This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; even though the implied warranty of MERCHANTABILITY. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this program. If not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also include information on how to contact you by electronic and paper mail. You should also get your employer (if you work as a programmer) or your school, if you are a student, to sign a "no warrant" disclaimer for the library, if necessary. Here's a sample, all the names:

Yoodynick, hereby disclaims all copyright interest in the library 'Foo' (a library that does (or is intended to do) the following):
signature of T Coon, A April 1992
T Coon, President of Vice